



GASTRO DIAMOND TOASTER MACHINE

**USER'S MANUAL AND
WARRANTY CERTIFICATE**

EN




Customer Services
+44 870 1820 333



www.karaca.uk

PARTS OF THE APPLIANCE

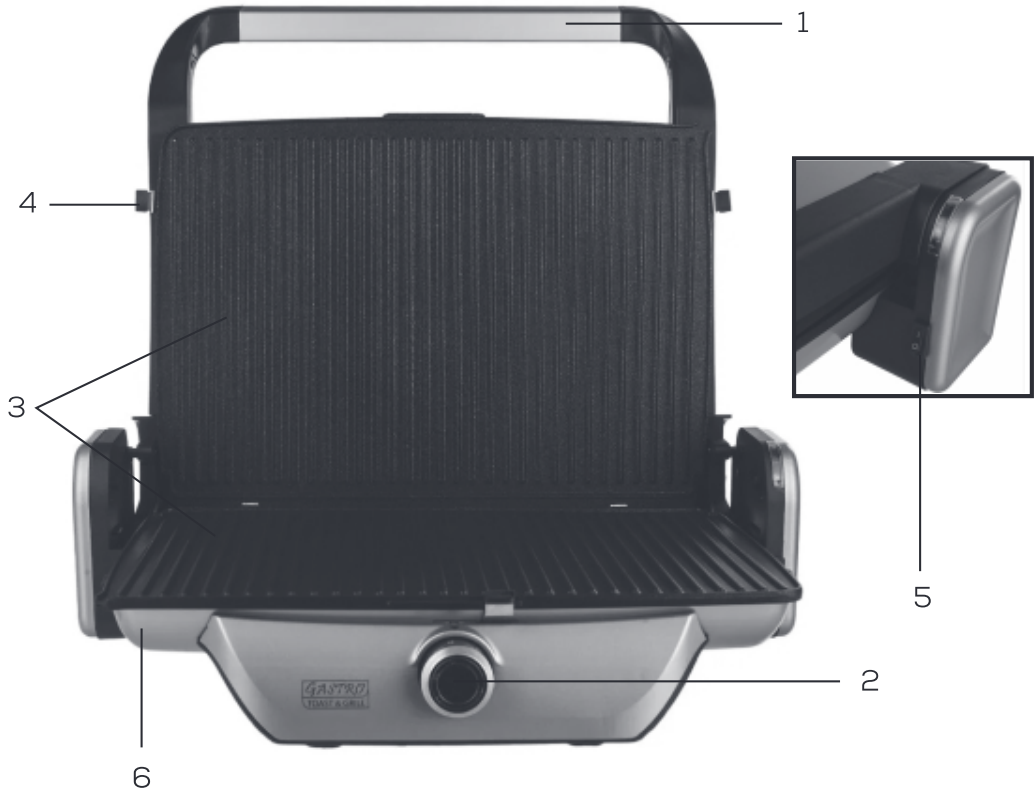

- 1 - Antibacterial handle
- 2- Thermostat adjustment button
- 3- Non-stick, removable bottom and top fireproof cooking plates
- 4- Cooking plates locking latch
- 5- Power
- 6- 180 Degree Opening Body

KARACA

Thank you for selecting the Karaca Toaster. We hope that this appliance will add convenience to your life, as other Karaca products do. In order to be able to use the appliance efficiently, please read this user's manual carefully and keep it for future reference.

IMPORTANT SAFETY NOTES

In the use of electric appliances, all fundamental safety instructions should be strictly observed.

"This appliance was not designed for being used by children or by persons who have reduced physical, perceptual or mental abilities or who are deficient in terms of experience and knowledge, unless they are supervised during use by a person who is responsible for the safety of the appliance."

- Check if the mains voltage value is compatible with the voltage value specified on the rating plate of Karaca Toaster. Any failure or damage that may occur as a result of incompatibility between the mains voltage value and the appliance's voltage value will not be under our company's responsibility and will be handled out of the warranty coverage.
- This appliance was designed for domestic use only and it should not be used for commercial or industrial purposes.
- In order to avoid damaging the appliance, do not use extension cables with inadequate current rating.
- Keep the appliance away from the reach of children.
- Do not place the appliance on or near direct heat sources such as stoves and ovens.
- Make sure that the power cord of the appliance does not hang over the table or counter, or contact other appliances and hot surfaces.
- Use the appliance on a flat and stable surface that is resistant to heat.
- After use, unplug the appliance and leave it to cool down and do not move it before it has completely cooled down.
- Unplug the appliance when it is not in use and before cleaning.
- Never turn on the appliance without the cooking plates installed.
- NEVER immerse the appliance in water for cleaning or other purposes. Prevent the ingress of water/water vapour in the appliance.
- Do not touch metal parts of the appliance during use.
- Avoid damaging the power cord or plug of the appliance. For unplugging the appliance, NEVER pull the power cord and do it by holding the plug.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance has been damaged due to dropping or for any other reason. Do not attempt to repair the appliance yourself and contact the Karaca Call Centre.
- Operate the appliance as instructed.

WARNING:

This appliance can be used by children aged 8 and above and person with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and power cord out of reach of the children below the age of 8.

INSTRUCTIONS FOR USE

- You can use your Karaca Toaster for heating and cooking as well as making sandwiches or toast.
- With the adjustable heat setting button, it works safely, prevents overheating, and also keeps the cooking surface at the desired temperature and ensures that the food is cooked consistently.
- You can remove the heater plates of your device by slightly pressing the latch.
- Before first use, clean the heater plates with lukewarm water and a small amount of dishwashing liquid. Then install the heating plates to their places. When you hear the click sound, this means the plates are installed well.
- We recommend to use some oil on plates before the first use
- Plug your device into the socket and set the heat at the highest level. It may emit odor and smoke during the first use. This will not occur after several times of use.

NOTE: While in use, make sure that power cord is away the heater plates.

HEAT SETTING (Min. / Max.)

You can adjust the heat setting by turning the knob towards (Min. / Max.) depending on what you make.

COOKING FUNCTIONS

Sandwich and Toast

- Plug your device into the socket, set the heat adjustment knob to the desired position and preheat it.
- Spread some butter on toast bread or sandwich buns and slowly close the cover.
- The length of cooking time depends on the ingredients and your personal taste. Both sides of your food are cooked at the same time.
- Since your appliance has non-stick heating plates, you can make toast/sandwich without using any butter.

WARNING:

1-NEVER touch it as the outer surfaces of your appliance get hot during use. Use the handle to open the top cover. When the top cover is opened, steam may come out between the heating plates. Take care when removing the food.

2-Use plastic or wooden tools to remove the food from the plate not to damage the non-stick surface of the appliance. Never use metal tongs, forks and knives as this may damage the coating.

INSTRUCTIONS FOR REPAIR AND MAINTENANCE AND USE

- Never attempt to disassemble and repair the appliance when it is broken down.
- Do not operate the appliance and contact the authorised technical service when the appliance is dropped on the floor, it hits to a hard object or there is any crack or fracture on it.
- Never attempt to replace a damaged power cord or plug and contact the authorised technical service.
- Do not try to move or carry the appliance by holding through the power cord.
- Always unplug the appliance by holding the power socket with one hand and never pull through the power cord.
- Always keep the appliance unplugged when it is not in use.

Cleaning and Maintenance

- Unplug the appliance and wait for it to completely cool down before cleaning.
- Clean the cooking plates after every use in order to protect the non-stick coating on the plates.
- You can clean the cooking plates with warm soapy water by use of a soft piece of cloth or plastic brush, or put them in the dishwasher.
- There may be some heating coil marks on the cooking plates due to heat. You just need to the wash the plates to get rid of such marks.
- Do not use abrasive materials such as metal brushes or wire in order to avoid damaging non-stick coating on the plates.
- You can clean the heating coils and heat reflector plates by use of a damp piece of cloth after removing the cooking plates.
- You can clean the outer plastic and metal surfaces of the appliance by use of soapy water and a piece cloth.
- You can wind the power cord on the cord storage unit and store the appliance in vertical position thanks to the automatic locking mechanism.
- NEVER immerse any part of the device other than the cooking plates in water.

Using lifetime: 7 years

Technical Specifications:

220-240V~50-60Hz, 2000W

Points to Consider During Transportation and Handling

- Keep the appliance in its original box in order to avoid damage during transportation and handling.
- Keep the appliance in its normal position during transportation.
- Do not drop the appliance on the floor and protect it from impacts during transportation.
- Damages and breakdowns caused by transportation and handling after the delivery of the appliance to the customer will be out of the warranty coverage.

This device complies with the AEEE Directive.

WEEE

Since this appliance is designed with recyclable parts in accordance with the WEEE Directive, do not dispose it of together with domestic waste. Please bring it to the nearest waste collection centre to enable the recycling of the appliance.



Manufacturer/Importer Company:

KARACA PORCELAIN UK LIMITED

Unit 10B, Viscount Way, South Marston Park, Swindon, SN3 4TN



TOASTER

WARRANTY CONDITIONS

COVERAGE AND CONDITIONS OF WARRANTY

1- The warranty period is TWO YEARS and this Warranty Certificate should be kept during the warranty period, since it is required to be presented for warranty claims.

2- The warranty period can be extended upon the mutual understanding between the parties (e.g. for 2-5 years), with the conditions to be mutually agreed.

3- Since the invoice date will be considered in potential disputes during the warranty period, invoice of the product or its photocopy will be required to be presented together with the certified Warranty Certificate.

4- The warranty will be invalid if there is the invoice or the Warranty Certificate is altered, or if the original serial number on the product is removed or altered.

5- The warranty will be invalid if it is determined that the device was installed or disassembled by persons other than our company or authorized technical services.

6- The warranty coverage provided by our company does not include damages or breakdowns that occur as a result of the use of the product out of its intended use or in abnormal conditions.

The following situations are also out of the warranty coverage:

- Damages and breakdowns caused by noncompliance with the instructions given in the user's manual or installation manual or by wrong use.
- Damages and breakdowns caused by excessively low or high voltage, improper electricity wiring, or voltage values different from the specifications on the product identification plate.
- Damages and breakdowns caused by disasters such as fire, flooding or stroke of lightning, and damages and breakdowns that occur during loading, unloading or transportation after the delivery of the product to the customer.

7- Any person other than identified on the invoice or Warranty Certificate of the product cannot claim for any right and/or compensation. The product is under warranty coverage with its all parts and components.



TOASTER

WARRANTY CONDITIONS

8- In case the product is determined to be defective, the consumer may exercise any of the following rights defined in 2nd chapter article 19/3 of the Consumer Rights Act 2015:

- a) Terminate the contract.
- b) Claim for discount on the sales price.
- c) Claim for free of charge repair.
- d) Claim for the replacement of the product with a non-defective equivalent.

9- In case the consumer opts for exercising the free of charge repair right, the manufacturer will be obliged to repair the product or have it repaired without demanding any fee under any name including but not limited to workmanship or parts replacement. (Chapter 2 article 23/2)

10- Under Part 1, a consumer is entitled to a full or partial refund instead of a repair or replacement if:

- the cost of the repair or replacement is disproportionate to the value of the goods or digital content;
- a repair or replacement is impossible;
- a repair or replacement would cause the consumer significant inconvenience;
- or the repair would take an unreasonably long time to complete.

In circumstances where a repair or replacement is not possible, or an attempt at repair fails, or the first replacement is also faulty, the consumer has a right to reject the goods and claim a full refund (or a price reduction if they wish to keep the product).

Alternatively, the consumer has the right to insist on another attempt at repair or a second replacement.)

11- Consumer Protection issues are dealt with when complaints are made to the Director-General of Fair Trade.



TOASTER

WARRANTY CERTIFICATE

The manufacturer's or Importer's

Business Title: Karaca Porcelain Uk Limited

Address: Unit 10B, Viscount Way, South Marston Park,
Swindon, SN3 4TN

Phone & Fax Number: 0212 412 44 00 (pbx) – 0212 412 44 99

Customer Services: +44 870 1820 333

Web: www.karaca.uk

KARACA PORCELAIN UK LIMITED
Unit 10B, Viscount Way,
South Marston Park,
Swindon, SN3 4TN

The seller's

Business Title:

Address:

Phone Number:

Authorized Person:

Seal and Signature of the Authorized Person:

Invoice Number:

Invoice Date:

Date and Place of Delivery:

The product's

Type: Toaster

Model: Gastro Diamond

Model No: Gastro Grill

Brand: KARACA

Serial Number:

Warranty Period: 2 (two) years

Maximum Allowed Repair Time: 20 (twenty) working days

This certificate is issued based on the permit dated 7th of May 2014 with number 131863 of the Ministry of Customs and Trade of the Turkish Republic.